




# Water Polo Scoreboard

With 2.4 GHz Integrated Wireless



## Installation and User Guide

F1005 Rev. 201411

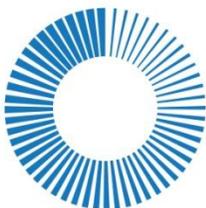

**Colorado  
TIME SYSTEMS**  
A **PLAYCORE** Company

Customer Service Department  
www.coloradotime.com  
Email: customerservice@coloradotime.com  
Phone: +1 970-667-1000  
Toll Free U.S. /Canada 800-287-0653  
Fax: +1 970-667-1032

**Manufacturer:**

Everlast Climbing Industries, Inc.  
DBA Colorado Time Systems  
1551 East 11th Street  
Loveland, CO 80537 USA

Sales: 1-800-279-0111 or +1 970-667-1000

Service: 1-800-287-0653 or +1 970-667-1000  
Service Fax: 970-667-1032

Web: [www.coloradotime.com](http://www.coloradotime.com)

Email: [customerservice@coloradotime.com](mailto:customerservice@coloradotime.com)

**Product Identification**

Product: Multiline Scoreboards

Model Numbers:

MS-0140 through MS-0142

MS-0174

**Power Specification**

320W power supply: 100-240V, 50/60Hz, max 4A

Information in this manual is subject to change without notice. Pictures and illustrations may not accurately depict your version. Please check our website for the most current information; our user manuals are available online in the customer service section of our website.

Part Number F1005, Rev. 201411

©2014 Colorado Time Systems. All rights reserved.

## Contents

.....	1
<b>Water Polo Scoreboard</b> .....	<b>1</b>
Product Overview .....	1
Scoreboard Installation Preparation .....	1
Physical mounting.....	1
Setting Channel and PAN .....	2
Operating Instructions.....	4
WTTC and WHC .....	4
Sports console .....	5
Troubleshooting .....	7
No data appears on the scoreboard.....	7
Expected data does not appear on the scoreboard.....	7
Standards followed.....	8



## **Product Overview**

The Otter multiline scoreboards for Water Polo can be used indoors or outdoors. They feature a lightweight aluminum enclosure and plastic weather covers over the digits.

The scoreboard is operated wirelessly when controlled by a wireless tabletop controller, a wireless handheld controller, or a CTS sports console. When used wirelessly, the scoreboard is controlled by a certified radio patch antenna that is mounted internally which keeps it protected from damage. It can be operated wired when controlled by a CTS sports console.

The scoreboards also contain ambient light sensors which detect external light and shadows and then adjust the display for optimum visibility.

## **Scoreboard Installation Preparation**

When a board is used outdoors, the power cord must be used in conjunction with an outdoor-rated receptacle.

\*\*Typically, it is more convenient to complete the Channel and PAN settings (if necessary) on the ground prior to mounting the board. Instructions are on following pages.

It is the owner's responsibility to follow all applicable electrical and structural codes. It is the owner's responsibility to follow all applicable building codes.

Required mounting/installation drawings showing board dimensions, attachment points and weight are available from [www.coloradotime.com](http://www.coloradotime.com)

## **Physical mounting**

Determine the location for the scoreboard. It is the owner's responsibility to choose a location which can support the weight of the scoreboard, which is listed in the installation drawing. The scoreboard is mounted to a wall, corner or pole using kits that can be purchased separately. Follow the instructions that are included with that mounting kit.

Scoreboard support structures are the responsibility of the facility, and must be designed by a qualified structural engineer to meet all national and local codes. Refer to scoreboard installation drawing, showing the boards' dimensions, attachment points and weight.

**The board must not be connected to live AC power during installation.**

# Setting Channel and PAN



If using the scoreboard wirelessly, the scoreboard and your data source (wireless tabletop controller, or wireless handheld controller, or WA-2 wireless adapter with a sports timer) must be set to the same Channel and PAN. It is usually easiest to set the data source to match the scoreboard's Channel and PAN. To do this, follow the user instructions for the wireless tabletop or handheld controller, or the WA-2).

**The scoreboard's default factory settings are Channel 4 / PAN 0**

Occasionally it is preferable to change the scoreboard's Channel and PAN to match the data source.

To set the scoreboard's Channel and PAN:

1. The channel and PAN are set on control board A, which is next to the Period digit in most scoreboards (as shown in top image below). Remove end cap of one side by removing the screws. Slide out the weather cover over the Period digit to expose control board A. If there is no control board next to the Period digit, slide the weather cover back in, and slide out the weather cover over the Shot Time digits. Place the screws and weather cover in a safe place for later re-installation.

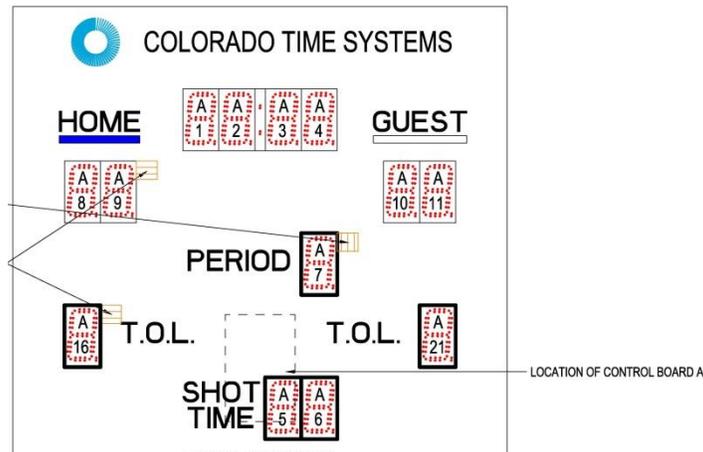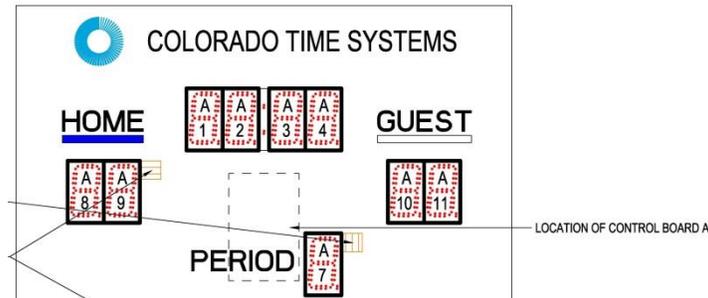

- Set the Channel and PAN on the dip switches for control board A.


**DIP switch settings** (Off = 0, On = 1)

**Channels:** Switches **1-4** of **S2**. 0 to 11 are valid

**PAN ID:** Switches **5-8** of **S2**. 0 to 15 are valid

0000	0	0010	4	0001	8	0011	12
1000	1	1010	5	1001	9	1011	13
0100	2	0110	6	0101	10	0111	14
1100	3	1110	7	1101	11	1111	15

**NOTE:** Settings of **S1** should not be changed. Doing so will cause the display to cease functioning properly.

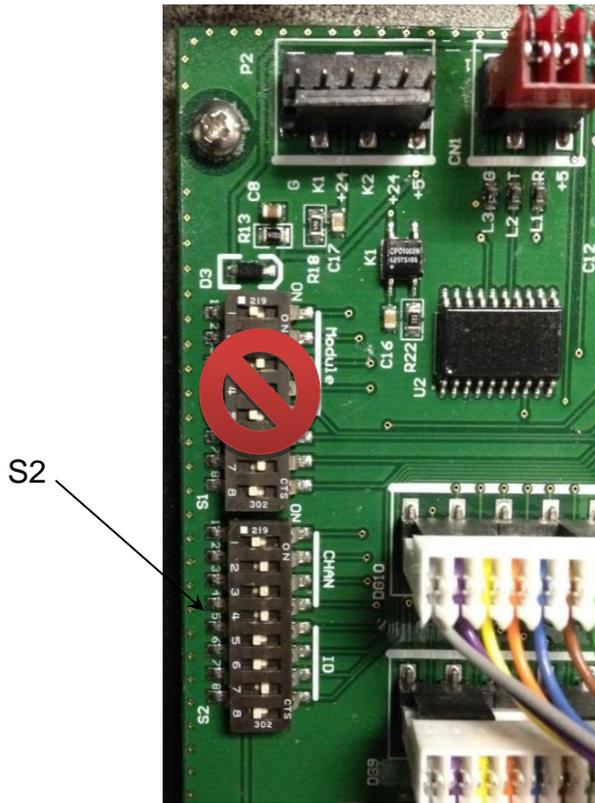

- Replace any digits you removed. Replace the weather covers. Replace end cap.

# Operating Instructions

Once the scoreboard is powered up it displays an initialization routine on the top line:

- LEDs on
- Digits count up 0 through 9
- Displays version number
- Rotates through address, channel and PAN at least 3 times. For example, a board set to address 1, channel 4 and PAN 0 would show A01, C04, and P00.

The scoreboard is then ready for signals from its data source,

- WTTC-1 wireless tabletop controller, or
- WHC-1 wireless handheld controller, or
- CTS sports console (System 6, System 5, or System 4000).

## ***WTTC and WHC***

The wireless tabletop controller and wireless handheld are native wireless and need no additional hardware. The controller and scoreboard must be set to the same channel and PAN. Follow instructions in the WTTC quick reference or WHC user manual to change the channel and PAN there, and earlier in this manual to change the scoreboard.

## ***Time of Day***

When the scoreboard is on but does not receive data from a data source for longer than 30 seconds, the board will display time of day. Follow the instructions in your WTTC quick reference guide or WHC user manual to set the time of day, and it will also be saved to the scoreboard.


## ***Scoreboard Intensity and Ambient Light Sensor***

The WTTC can adjust the scoreboard's intensity; the WHC cannot. Follow the instructions in the WTTC quick reference guide to adjust scoreboard intensity. To enable/disable the ambient light sensors, the firmware revision of the WTTC must be version 1.3.5 or higher.

## **Sports console**


### **Cabled connection**

Sports consoles can be connected by cables to the scoreboard.

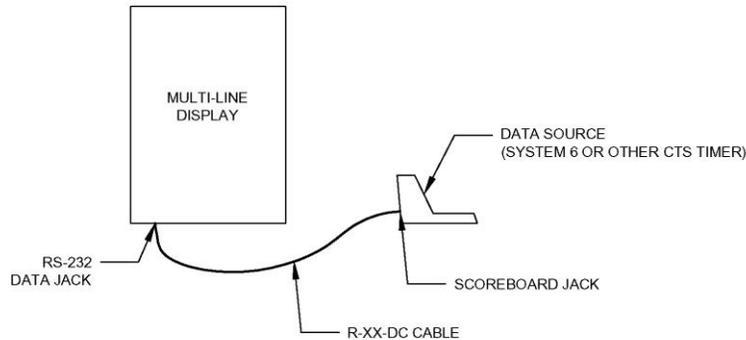

Use a data cable (R-xxDC) to connect your sports timer to the round quarter-inch RS-232 jack on the bottom of the scoreboard.

### **Wireless connection**

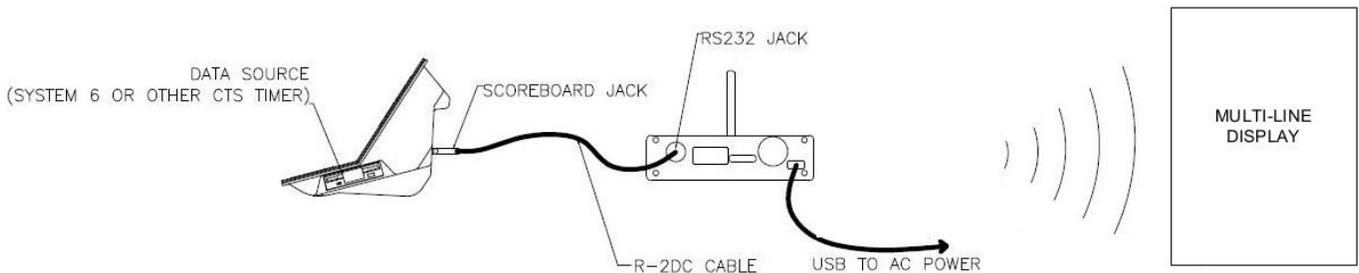

**When using a wireless connection, the WA-2 wireless adapter and scoreboard must be set to the same channel and PAN. Follow the WA-2 user instructions to change its channel and PAN. Follow instructions on previous pages if scoreboard Channel and PAN must be changed.**

### **Displaying data correctly**

Proper operation of the scoreboard requires the default scoreboard module definitions on the sports console.

### **Time of Day**

When the scoreboard is on but does not receive data from a data source for longer than 30 seconds, the board will display time of day. Follow the instructions in your sports console user manual to set the time, and it will also be saved to the scoreboard. The scoreboard definition for time of day module must be set 16, which is the default. If using the wireless connection via a WA-2, the firmware revision of the WA-2 must be version 2.0.5 or greater.

### **Ambient Light Sensor Set-up and Operation**

The ambient light sensors can be enabled and disabled from a System 6.

**To turn the sensor on**, follow these steps:

1. Go to the Scoreboard screen in Water Polo
2. Select “Increase/Decrease Intensity”
3. Select “2” as the intensity value
4. Press “Save Settings” if you want the ambient light sensor turned on each time you enter Water Polo.

The board will now begin to control the intensity automatically based on the intensity of the light hitting the board.

**To turn the sensor off**, selecting anything above a 2 for the intensity value and press “Save Settings” if you do not want the ambient light sensor on each time you enter Water Polo.

# Troubleshooting

<b>Issue</b>	<b>Solutions</b>
No data appears on the scoreboard	<ol style="list-style-type: none"> <li>1. Check that the scoreboard is turned on. The power switch is on the right end of the scoreboard.</li> <li>2. Check that the scoreboard is plugged in to a working AC outlet.</li> <li>3. Check that timer is plugged in and functioning.</li> <li>4. Check that any cables are firmly attached</li> <li>5. If using a wireless adapter, consult the user instructions for that adapter, and make sure that all settings (channel, etc.) are configured correctly</li> <li>6. Ensure that the scoreboard is not “blanked” from the sports timer. Consult your timer’s user’s manual for details.</li> </ol>
Expected data does not appear on the scoreboard	<p><b><i>Garbled data is displayed:</i></b> If you are sending data from a sports timer older than the System 6, make sure the timer is set to high speed data rather than low speed data. (The System 6 only sends high speed data).</p> <p><b><i>Incorrect or missing data:</i></b> Make sure the timer’s scoreboard module definitions are set to the default settings.</p> <p>Make sure you only have one active data source at a time. A sport console connected with a wire will override any wireless data sources.</p>

## **Standards followed**

UL 48

*Issue:2011/09/02 Ed:15 Rev:2012/05/04 UL Standard for Safety Electric Signs*

CAN/CSA C22.2#207

*Issue:1989/01/01 Portable and Stationary Electric Signs and Displays General*

*Instruction No 1: 1989/10/01 - (R2008)*

FCC 47CFR 15B cIB

*Issued:2011/04/21 Title 47 CFR Part 15 Subpart B Unintentional Radiators Class A Verification*

ICES 003

*Issue:2004/01/01 Issue No.4 Interference-Causing Equipment Standard, Digital Apparatus*





Customer Service Department  
[www.coloradotime.com](http://www.coloradotime.com)  
Email: [customerservice@coloradotime.com](mailto:customerservice@coloradotime.com)  
Phone: 970-667-1000  
Toll Free U.S. and Canada 800-287-0653  
Fax: 970-667-1032